




Kickstarter-Federn



Nr. 3499
Für **Albion**
Mod. E1 u. F1
Länge 15 mm
Ø 48 mm



Nr. 3500
Für **Albion**
Mod. C u. E
Länge 16 mm
Ø 42 mm




Nr. 3501
Für **B. M. W.**
Mod. R 32,
R 42, R 47
Länge 35 mm
Ø 35 mm



Nr. 3501 a
Für **B. M. W.**
Mod. R 11,
R 16, R 52,
R 62
Länge 40 mm
Ø 29,5 mm




Nr. 3501 b
Für **B. M. W.**
Mod. R 12,
R 17
Länge 50 mm
Ø 28,7 mm



Nr. 3502
Für **B. M. W.**
Modell R 52
Länge 45 mm
Ø 30 mm




Nr. 3502 a
Für **B. M. W.**
Mod. R 2, R 4
Länge 20 mm
Ø 47,5 mm



Nr. 3502 b
Für **B. M. W.**
Mod. R 4 (neu)
Länge 28 mm
Ø 55 mm



Nr. 3503
Für **D. K. W.**
Luxus-Sport
300/500 ccm
Länge 30 mm
Ø 49,5 mm

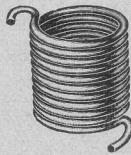

Nr. 3504
Für **D. K. W.**
Luxus 200
Länge 40 mm
Ø 37,5 mm



Nr. 3505
Für **D. K. W.**
Block 200/
300 ccm
Länge 36 mm
Ø 35 mm




Nr. 3505 a
Für **D. K. W.**
Für **Framo**
Länge 20 mm
Ø 47 mm




Nr. 3505 b
Für **D. K. W.**
Mod. RT 100
Länge 33 mm
Ø 23,5 mm




Nr. 3506
Für **D. K. W.**
500 ccm
Länge 40 mm
Ø 52 mm

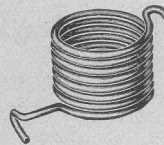


Nr. 3508
Für **Schüttoff**
für alle Mod.
Länge 28 mm
Ø 38,5 mm

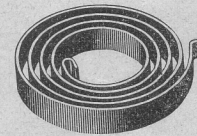

Nr. 3509
Für **Gillet**
500 ccm
Mod. 1927/29
Länge 640 mm
Ø 75 mm

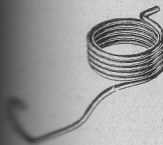

Nr. 3511
Für **Triumph**
Länge 15 mm
Ø 33 mm

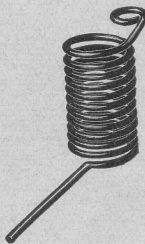

Nr. 3512
Für **Triumph**
Mod. T 1
Länge 48 mm
Ø 28 mm




Nr. 3513
Für **Triumph**
Mod. TIV
Länge 24 mm
Ø 31 mm



Nr. 3514
Für **D-Rad**
R 0/4
Länge 10 mm
Ø 39/47 mm




Nr. 3515
Für **D-Rad**
Mod. R0/6
und R 9
Länge
550 mm
Ø 75 mm

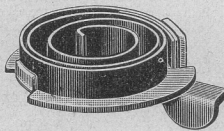


Nr. 3515 a
Für **D-Rad**
Mod. R0/6
und R9




Nr. 3516
Für **D-Rad**
Modell R0/4
Höhe 13 mm
Ø 49 mm

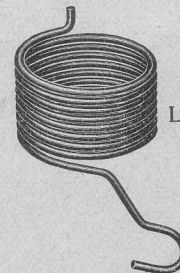

Nr. 3517
Für **D-Rad**
R 10/R 11
Länge 33 mm
Ø 55 mm

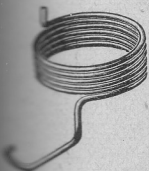

Nr. 3518
Für **Zündapp**
Länge 15,5 mm
Ø 50 mm

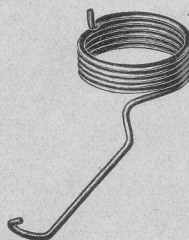

Nr. 3519
Für **Zündapp**
Länge 15,5 mm
Ø 48,5 mm



Nr. 3519 a
Für **Zündapp**
Mod. Derby
175/200 ccm
Länge 60 mm
Ø 29 mm



Nr. 3519 b
Für **Zündapp**
Modell
DE 200/DL 200
Länge 52 mm
Ø 29 mm